

110672 / 27823.01

No.	Description of Spare Part
3	Upper door hinge
5	Thermostat controller
5.1	Thermostat
5.11	Thermostat Knob
5.3	Incandescent bulb
5.5	Controller Shell
5.6	Lamp Cover
5.7	Light Holder
7	Ice box door
7.1	Ice box door handle
7.2	Ice box door pull buckle
7.3	Ice box door gasket
8	Door
8.1	Door gasket
8.2	Right aid closer
8.3	Left aid closer
9	Hinge seat of star gate
10	Handle of freezer chamber door
11	Upper balcony
12	Lower balcony
16	Drier filter
17	Connecting tube
18	Compressor
19	Compressor bracket
20	Power supply cord
21	Crisper drawer assembly
22	Cover of crisper drawer
23	Fridge shelf assembly
24	Drain pan
26	Lower door hinge
28	Short adjust leg
37	Door switch
40	Process tube
44	Top cover
45	Screw cover for top cover
47	Top cover decorative block
301	Carton

Bei spezifischen Fragen zu Ersatzteilen kontaktieren Sie bitte den Kundendienst unter 0848 000 120.

Pour toute question spécifique concernant les pièces de rechange, veuillez contacter notre service clientèle au 0848 000 120.

