

110670 / 27821.01

No.	Description of Spare Part
2	Door hinge screw cover
3	Upper door hinge
4	Door hinge cover
5	Thermostat controller
6	Magnetron switch
7	Display electric board
8	Display board base
9	Display control pannel
10	Temperature sensor
12	Fin evaporator
14	Wind sponge
15	Refrigeration upper air duct cover plate
18	Tray
19	Door handle
20	Door gasket
21	Door
22	Lower door suction aid
23	Lower door left suction aid
26	Middle drawer
27	Lower drawer
34	Defrosting heater
35	Defrosting rod
36	Heater water tank
39	Lower right door hinge
41	Compressor bracket
42	Drain pan
43	Compressor
45	Evaporative Condenser
47	Drying filter
48	Connecting tube
49	Drain pipe
50	power cord
53	Cover of control board
55	Electric control board
60	Freeze air duct,lower
61	Cover plate of refrigeration lower air duct
62	DC centrifugal fan motor components
63	Temperature sensor
64	Freezing air duct support
65	Sealing sponge of freeze air duct
66	PE sponge with aluminum foil
71	High adjust foot
73	High front foot
300	Trademark
301	carton

Bei spezifischen Fragen zu Ersatzteilen kontaktieren Sie bitte den Kundendienst unter 0848 000 120.

Pour toute question spécifique concernant les pièces de rechange, veuillez contacter notre service clientèle au 0848 000 120.

